


# ER 筒夾刀把 ER COLLET CHUCK



## Dimensions / 尺寸標示

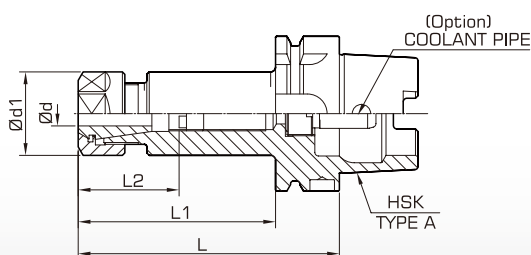

Order No. 訂購編號	Range $\varnothing d$ 夾持範圍	$\varnothing d_1$	L	L1	Tool Clamping Depth L2 刀具夾持深度	page.146		page.144	page.120	page.148
						Nut 螺帽	Screw 調整螺絲	Collet 筒夾	Wrench 扳手	
HSK50A	ER16-100	0.6~10.0	28	100	74	29~58	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER32-100	1.6~20.0	50	100	74	41~56	CAP-ER32	ER-M22	ER32	PHS-ER32
HSK63A	ER16-100	0.6~10.0	28	100	74	29~58	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER16-160	0.6~10.0	28	160	134	29~58	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER25-100	0.6~16.0	42	100	74	35~55	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER25-160	0.6~16.0	42	160	134	35~73	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER32-100	1.6~20.0	50	100	74	41~54	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER32-160	1.6~20.0	50	160	134	41~78	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER40-120	2.6~26.0	63	120	94	50~68	CAP-ER40	ER-M28	ER40	PHS-ER40
HSK100A	ER16-100	0.6~10.0	28	100	71	29~54	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER16-160	0.6~10.0	28	160	131	29~58	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER25-100	0.6~16.0	42	100	71	35~50	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER25-160	0.6~16.0	42	160	131	35~73	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER32-100	1.6~20.0	50	100	71	41~49	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER32-160	1.6~20.0	50	160	131	41~78	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER40-120	2.6~26.0	63	120	97	50~68	CAP-ER40	ER-M28	ER40	PHS-ER40

### Remarks / 備註

- 若需搭配中心出水管，請參考 page.145 規格表
- 若需出水型刀把，請參考 page.26 選用說明

### Applications / 應用

