


ER 小徑刀把
ER SLIM TYPE CHUCK



Dimensions / 尺寸標示

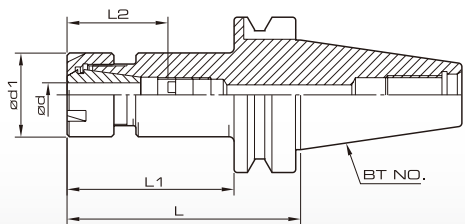

						page.147	page.144	page.120	page.148	
Order No. 訂購編號	Range ød 夾持範圍	ød1	L	L1	Tool Clamping Depth L2 刀具夾持深度					
						Nut 螺 帽	Screw 調整螺絲	Collet 筒 夾	Wrench 扳 手	
BT30 (BTT30)	ER11-070M	0.6~7.0	16	70	48	19~48	CAP-ER11M	ER-M8	ER11	PHS-ER11M
	ER11-100M	0.6~7.0	16	100	78	19~48	CAP-ER11M	ER-M8	ER11	PHS-ER11M
	ER11-120M	0.6~7.0	16	120	98	19~48	CAP-ER11M	ER-M8	ER11	PHS-ER11M
	ER16-070M	0.6~10.0	22	70	48	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER16-100M	0.6~10.0	22	100	78	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER16-120M	0.6~10.0	22	120	98	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER20-070M	0.6~13.0	28	70	48	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
	ER20-100M	0.6~13.0	28	100	78	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
BT40 (BTT40)	ER11-090M	0.6~7.0	16	90	63	19~48	CAP-ER11M	ER-M8	ER11	PHS-ER11M
	ER11-120M	0.6~7.0	16	120	93	19~48	CAP-ER11M	ER-M8	ER11	PHS-ER11M
	ER16-090M	0.6~10.0	22	90	63	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER16-120M	0.6~10.0	22	120	93	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER16-150M	0.6~10.0	22	150	123	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER20-090M	0.6~13.0	28	90	63	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
	ER20-120M	0.6~13.0	28	120	93	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
	ER20-150M	0.6~13.0	28	150	123	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
BT50 (BTT50)	ER16-105M	0.6~10.0	22	105	67	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER16-135M	0.6~10.0	22	135	97	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER16-165M	0.6~10.0	22	165	127	29~58	CAP-ER16M	ER-M11	ER16	PHS-ER16M
	ER20-105M	0.6~13.0	28	105	67	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
	ER20-135M	0.6~13.0	28	135	97	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M
	ER20-165M	0.6~13.0	28	165	127	32~68	CAP-ER20M	ER-M14	ER20	PHS-ER20M

Remarks / 備註

- 若需出水型刀把，請參考 page.26 選用說明

Applications / 應用

